



## AutoCal V2 VIN Licenses & Slots

EFILive Support - 2020-09-11 - Comments (0) - AutoCal V2 Licensing


**AutoCal V2** can hold up to 221 VIN Licenses, however users should check tuner imposed limits. The **VIN License Slot Count** has a default value of 1. Tuners manage maximum VIN license slots for their AutoCal customers.

### Find Serial and Auth Code


***TCM flashing does not require an available VIN License for customers running V8.3.1 software or later, and licensed TCMs are no longer displayed.***

To view License Status or generate Serial and Auth Code information for VIN License purchases;


1. Connect your **AutoCal** device to your PC.
2. Start the **EFILive V8 Scan and Tune** application.
3. Click the **F7: Licenses** button in the left-hand pane.
4. On the **F2: Hardware** tab, the serial number is displayed in the **Serial Number** field. Copy the Serial Number for VIN License purchase.

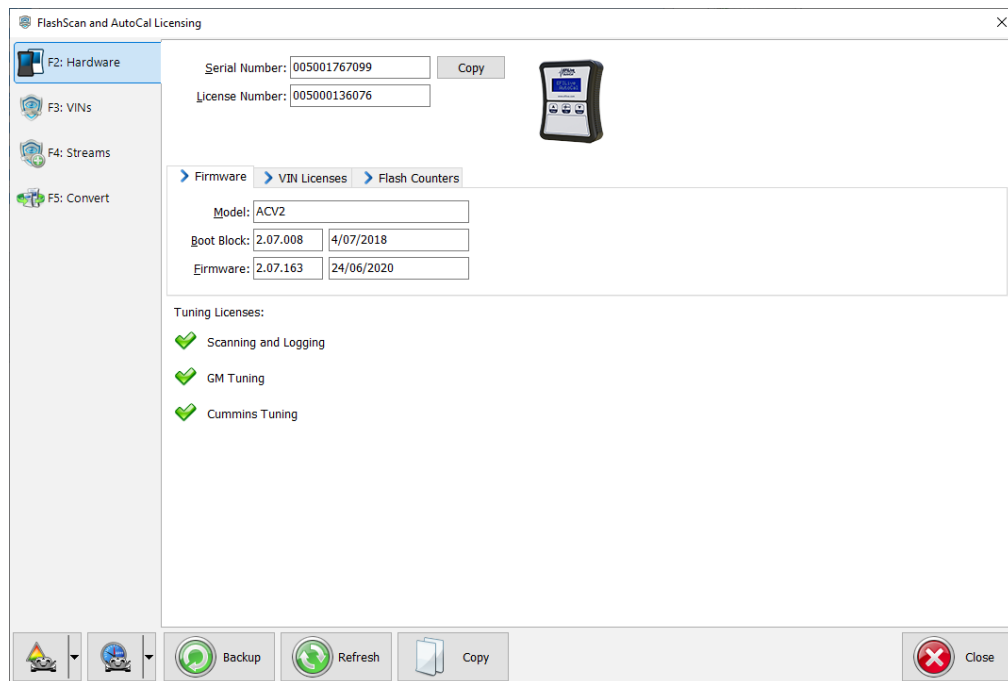

5. Click the **F3: VIN** tab to display VIN License information.

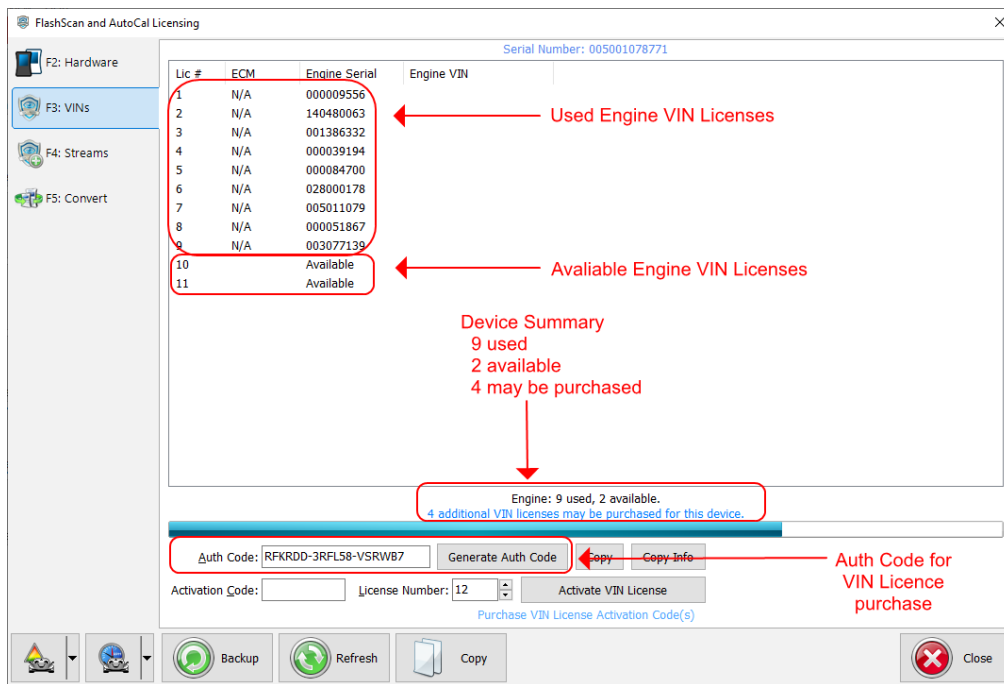

- For VIN License purchases, click the **[Generate Auth Code]** button. The Authentication Code will be shown in the **Auth Code** field. Where the available VIN license slot count is zero, customers will be unable to order VIN Licenses until the VIN License slot limit is increased by their Tuner.

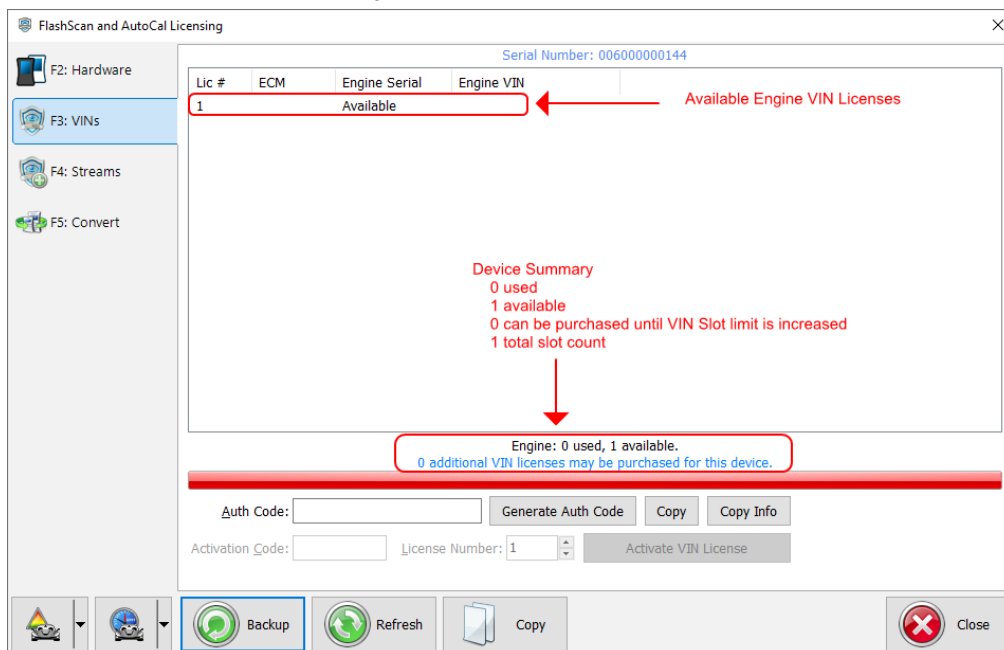


## Apply VIN License Activation Codes


To apply VIN License Activation codes;

- Locate your VIN License activation email.
- Connect your **FlashScan/AutoCal** device to your PC.
- Start the **EFILive V8 Scan and Tune** application.
- Click the **[F7: Licenses]** button in the left-hand pane.

- Click the **[F3: VINs]** button in the left-hand pane.
- Paste the Activation Code and enter the License number from your email.

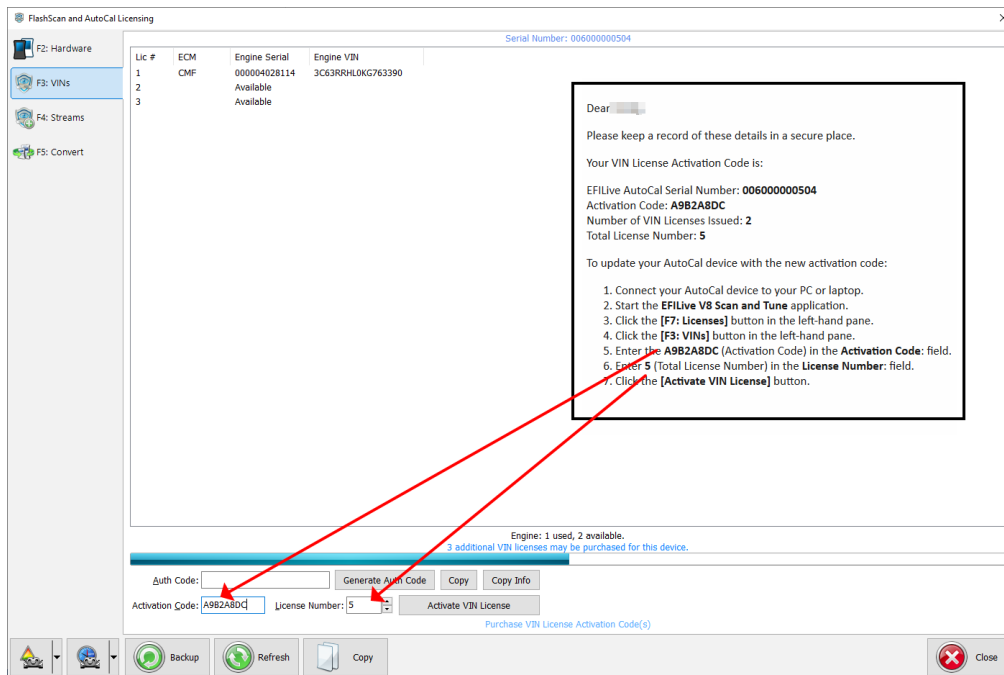

- Select **[Activate VIN License]** to add the licenses to the device.

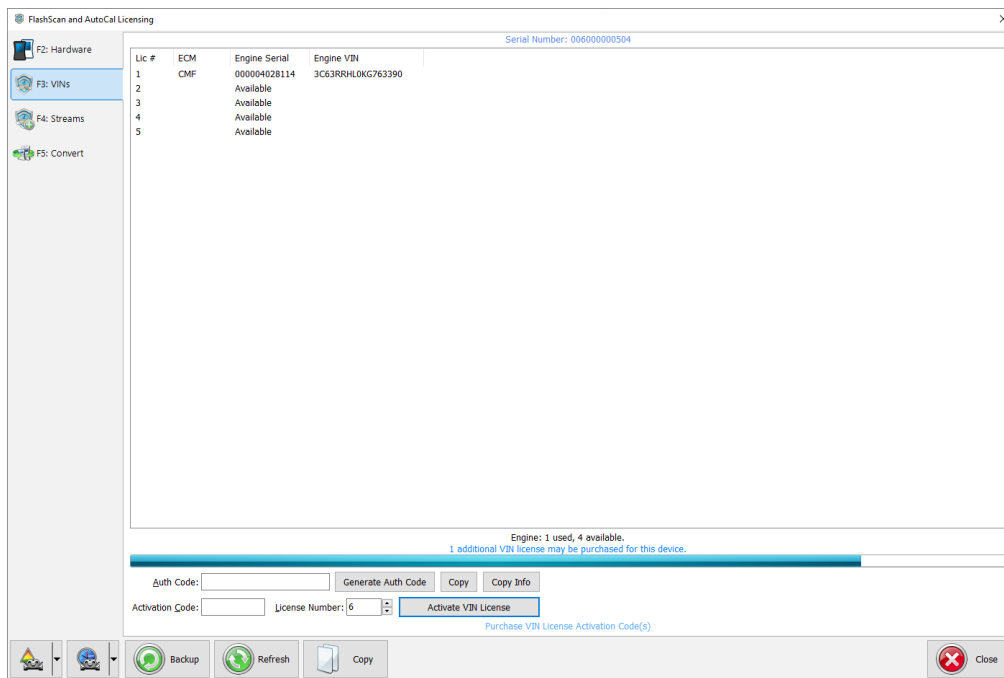

## Related Content

- [Managing VIN Slot Limits](#)
- [FlashScan License Status](#)