



Connecting AutoCal V2

EFILive Support - 2020-08-28 - Comments (0) - AutoCal V2 Hardware Configuration

Connecting AutoCal V2:



WARNING

The RJ45 connection used on the OBDII cable (B) is the same as used on a standard computer network cable. Never connect the OBDII cable to your computer's network socket, or a network cable to your EFILive device. Damage will almost certainly occur to either your computer or EFILive device.

Related Content

- [AutoCal V2 Hardware Specification](#)
- [Pin Assignments](#)