



FlashScan Link to AutoCal

EFILive Support - 2020-08-25 - Comments (0) - V8 Scan and Tune Software

For an AutoCal device to be functional, it must be linked to a Tuners FlashScan device. An unlinked AutoCal cannot be used to read or flash controllers.

FlashScan V3, FlashScan V2 or FlashScan HD can provide the link to **AutoCal V3, AutoCal V2 or AutoCal HD**.

Tuners can manage linking before shipping the **AutoCal** or by generating a **Remote-Link Code** that can be emailed to their customer. If the tuner requires the **Can self-sign** option, which allows **AutoCal** users to self-sign read files for flashing (most commonly used for end users to save and reflash their stock file without the need to send it to their tuner), then the tuner must use the Physical Linking option.

Physically Link AutoCal

An **AutoCal** MUST be physically linked to **FlashScan** if the Can self-sign option is required.

1. Connect your **FlashScan** and **AutoCal** device to your PC.
2. Start the **EFILive V8 Scan and Tune** application.
3. Open the **Control Panel**.
4. Select the **[F7: Licensing]** option.
5. Select **[Link]**.

EFILive Control Panel

EFILive Scan Log Tune

F2: USB
F3: USB Testing
F4: Options
F5: Calibrate A/D
F6: Firmware
F7: Licensing
F8: Trace
F9: LCD Capture
F10: About


FlashScan/AutoCal V1->V2 Upgrade

AutoCal FlashScan


Devices
Link
Max VINs
 Can self-sign

The attached devices have not been linked yet. Click the [Link] button to link them.

6. Confirm the link between AutoCal and FlashScan

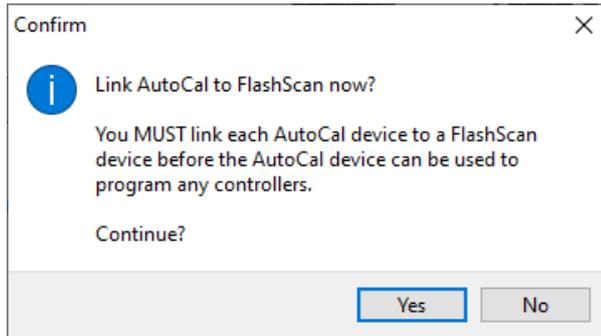


7. When the devices are successfully linked, the linking image will be updated.

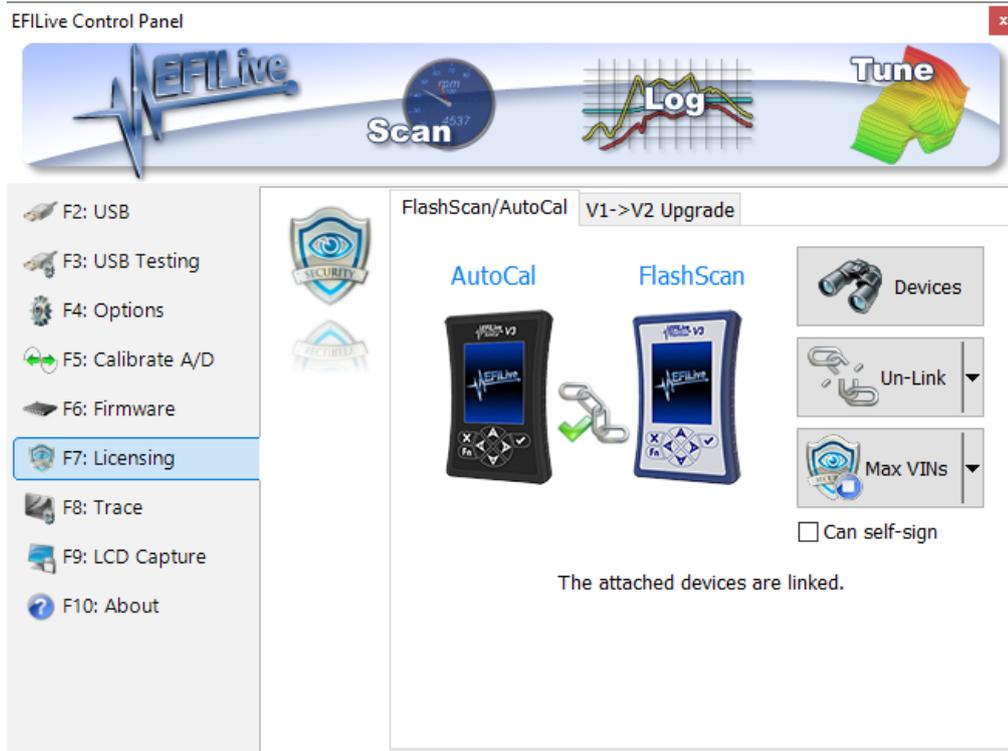


Remote Link AutoCal

1. Connect your **FlashScan** device to your PC.
2. Start the **EFILive V8 Scan and Tune** application.
3. Open the **Control Panel**.
4. Select the **[F7: Licensing]** option.
5. Select **[Link]**.
6. Click on the drop down of **[Link]** button and select **[Generate Remote-Link Code]**.

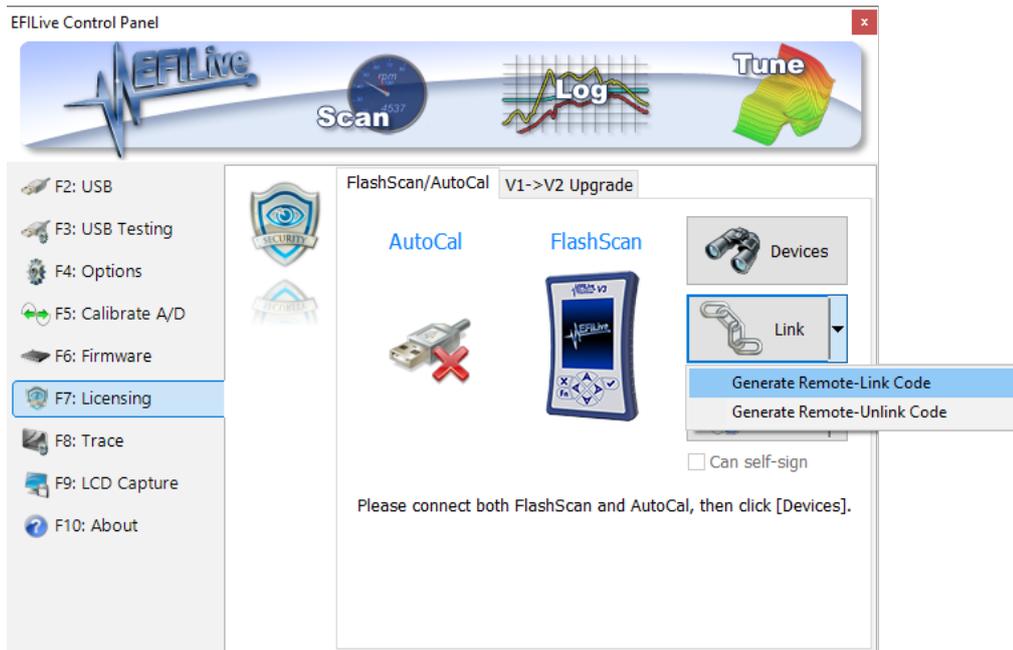

7. Enter the serial number of the **AutoCal** to be linked.

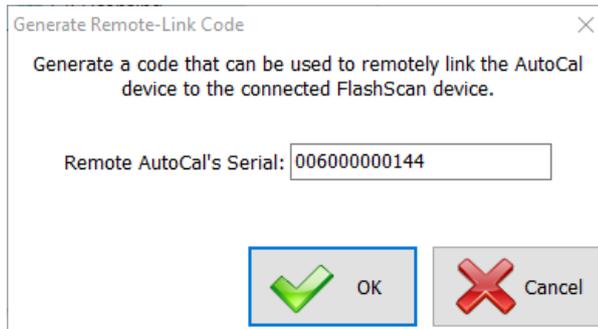

8. Select **[OK]**.

9. Copy the **Remote-Link Code** information and email it to your customer.

Generate Remote-Link Code [Close]

 Click the [Copy] button to copy the text below to the clipboard. Paste the text into an email and email it to your AutoCal customer so that they can remotely link their AutoCal to your FlashScan.

EFILive AutoCal Serial Number: 006000000144

WARNING:
While AutoCal is linked to FlashScan, the AutoCal is authorized to flash tune files created by the linked FlashScan.
If you unlink AutoCal, it will NOT BE AUTHORIZED TO FLASH ANY TUNE FILES.
When AutoCal is re-linked to another (or the original) FlashScan, it will be authorized to flash tune files created by the newly linked FlashScan.

To remote-link your AutoCal, please follow these instructions.

1. Your AutoCal device must be using firmware V3.00.028 or later.
2. Connect your AutoCal device to your PC using the supplied USB cable.
3. Highlight the 4 lines of "Activation Codes", right click and select "Copy".
4. Start the EFILive V8 Scan and Tune software.
5. Select the [F7: Licenses] tab page.
6. Select the [F5: Convert] tab page.
7. Click the [Paste] button.
8. Click the [Convert] button.

Activation Codes:

40,0F,51,F0,9B,D3,6B,23,30,1F,42,0D,DE,91,
BA,A5,B6,AC,B7,A0,AF,C4,8D,5E,11,3A,25,36,
29,37,20,2B,38,27,2A,35,26,39,22,2D,3E,34,
29,2A,4F,34,7C,1E,2D,26,38,68,18,E7,04,DD

[Copy] [OK]

Related Content

- [AutoCal Unlink](#)

Comments (0)
