



Serial Number and Auth Codes

EFILive Support - 2024-04-19 - Comments (0) - Getting Started

Find Serial and Auth Code

TCM flashing does not require an available VIN License for customers running V8.3.1 software or later, and licensed TCMs are no longer displayed.

For VIN License purchases, you must be running **EFILive V8.2.24** software or later to generate valid VIN License Auth Codes.

1. Connect your **FlashScan/AutoCal** device to your PC.
2. Start the **EFILive V8 Scan and Tune** application.
3. Click the **[F7: Licenses]** button in the left-hand pane.
4. The serial number will be shown in the **Serial Number** field.

FlashScan and AutoCal Licensing

F2: Hardware
F3: VINs
F4: Streams
F5: Convert

Serial Number: 006000000128
License Number: 006000000128
Protected Number: 006000000128

EULA has been accepted.

> Firmware > VIN Licenses > Flash Counters

Model: EFILive FlashScan V3
Boot Block: 3.00.004 23/04/2020
Firmware: 3.00.043 26/06/2020

Tuning Licenses:

- ✓ Scanning and Logging
- ✓ GM Tuning
- ✓ Cummins Tuning
- ✓ Cummins HD
- ✗ Pro Tuning

Activation Code:

Activate Pro Tuning

Purchase Tuning License Activation Code(s)

Backup Refresh Copy Close

5. Click the **[F3: VINs]** button in the left-hand pane.
6. Click the **[Generate Auth Code]** button. The Authentication Code will be shown in the **Auth Code:** field. **Note: An Auth Code is not applicable to a Scan Only product, only devices with a Tuning Option license.**

FlashScan and AutoCal Licensing

Serial Number: 00600000128

Lic #	ECM	Engine Serial	Engine VIN
1		Available	
2		Available	
3		Available	
4		Available	
5		Available	
6		Available	

Engine: 0 used, 6 available.
594 additional VIN licenses may be purchased for this device.

Auth Code: HFAXZQ-GRTXJT-ELXDTF Generate Auth Code Copy Copy Info

Activation Code: License Number: 7 Activate VIN License

[Purchase VIN License Activation Code\(s\)](#)

Backup Refresh Copy Close

7. If generating the serial and auth-code to place a VIN License order, the number of additional VIN licenses that may be purchased for the device must be greater than zero. Where available license slots is zero, customers will be unable to generate an Auth Code to order VIN Licenses. VIN License Capacity is;

1. **FlashScan V3** - 600 VIN Licenses.
2. **FlashScan V2**- 221 VIN Licenses.
3. **AutoCal V3** - 600 VIN Licenses, however the **VIN License Slot Count** has a default value of 1. Tuners manage maximum VIN license slots for their AutoCal customers.
4. **AutoCal V2** - 221 VIN Licenses, however the **VIN License Slot Count** has a default value of 1. Tuners manage maximum VIN license slots for their AutoCal customers. .

FlashScan and AutoCal Licensing

Serial Number: 00600000144

Lic #	ECM	Engine Serial	Engine VIN
1		Available	

Engine: 0 used, 1 available.
0 additional VIN licenses may be purchased for this device.

Auth Code: Generate Auth Code Copy Copy Info


Activation Code: License Number: 1 Activate VIN License

Backup Refresh Copy Close


Apply VIN License Activation Codes

To apply VIN License Activation codes;

1. Locate you VIN License activation email.
2. Connect your **FlashScan/AutoCal** device to your PC.
3. Start the **EFILive V8 Scan and Tune** application.
4. Click the **[F7: Licenses]** button in the left-hand pane.
5. Click the **[F3: VINs]** button in the left-hand pane.
6. Paste the Activation Code and enter the License number from your email.

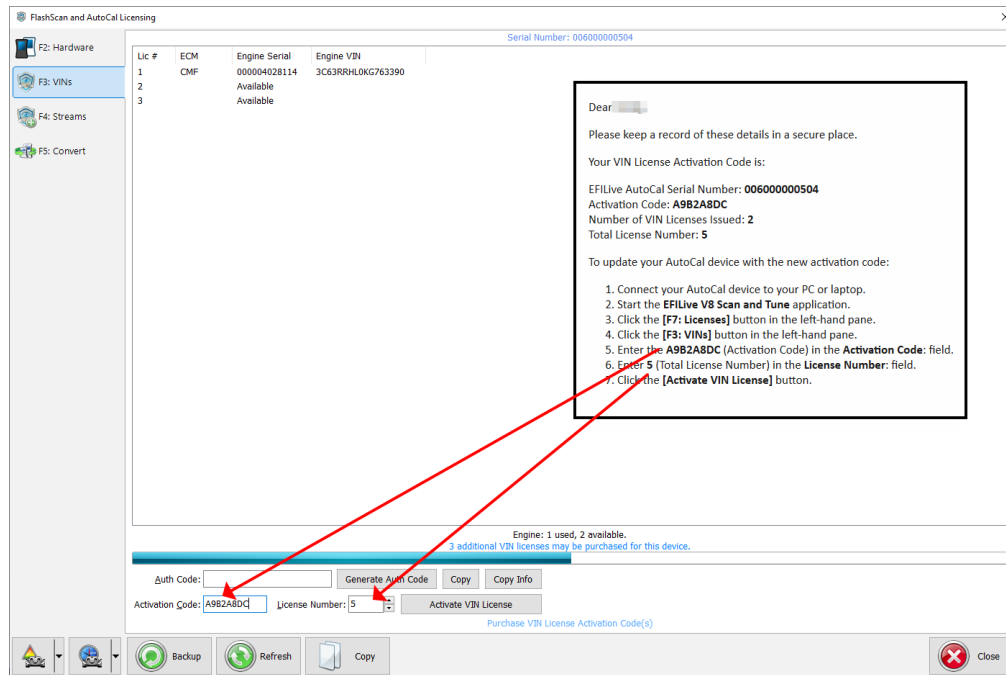

7. Select **[Activate VIN License]** to add the licenses to the device.

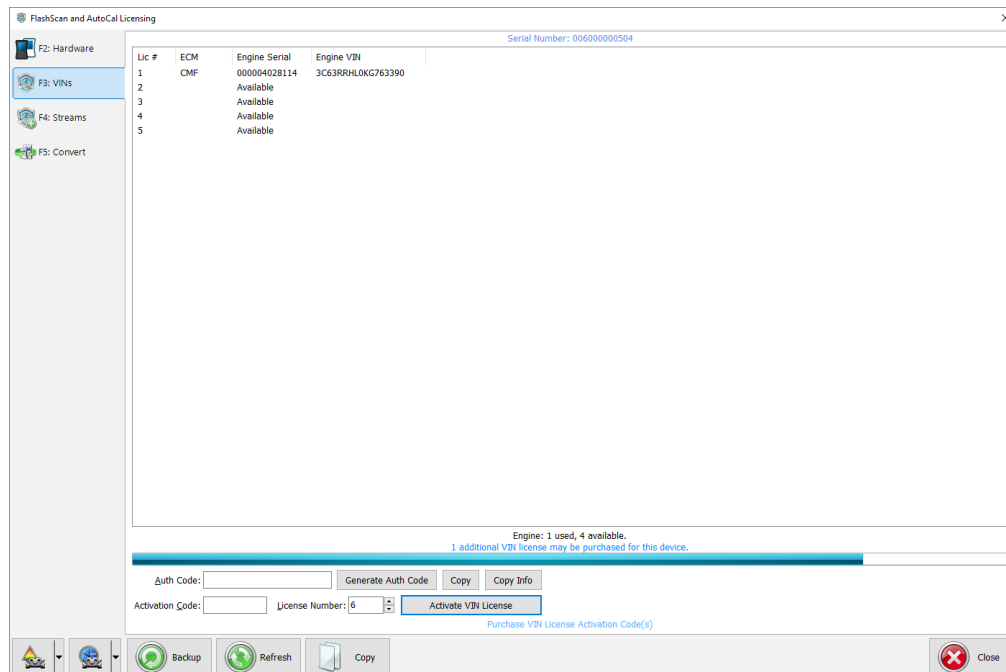

Related Content

- [Registration Details](#)
- [Managing VIN Slot Limits](#)
- [Validation Help](#)

Comments (0)
