



## V3 Data Logging

EFILive Support - 2021-07-14 - Comments (0) - AutoCal V3 Vehicle Communications

### Standard Menu:

Follow these steps to log the selected controller.


1. Configure [FlashScan/AutoCal V3 for BBX](#) features if not already setup.
2. Connect your **FlashScan/AutoCal V3** device to your vehicle.
3. Turn the vehicle ignition **On**.
4. Navigate to the **Scan Tool -> F1 Select PIDs** menu option.
5. Select correct controller type from BBX configured controllers.



6. Navigate to the **F1 Scan Tool -> F2 Data Logging** menu option.
7. Select **F1: Record Data** to commence the logging session.
8. The LCD will display recording status, elapsed time, frame count and the selected PIDs.



9. A range of options are available while the Log is recording:
  1. Select ✓ to pause/resume the log.
  2. Select the up and down arrows to navigate through selected PIDs.
  3. Select X, to stop data logging and save the logged data.
10. Start the vehicle and drive to record actual performance.
11. Select X on **FlashScan/AutoCal V3** to stop data logging and save the log file.

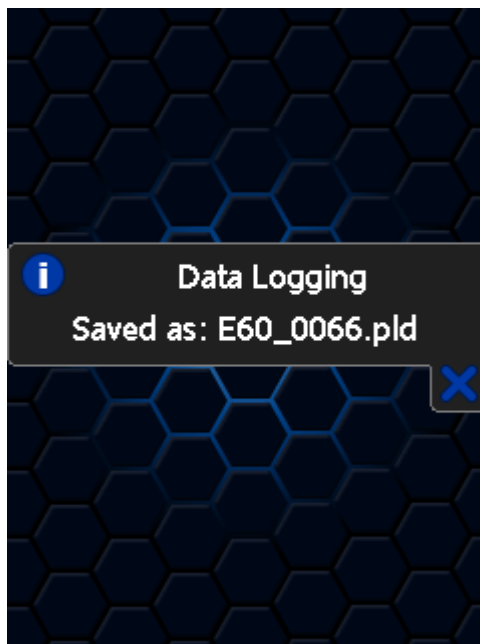

## User Defined Menu:

Follow the instructions provided by your Tuner to log the selected controller, alternatively to load the standard menu even when a custom menu is installed, hold the [X] key while powering up the device. Release the key once the splash screen is visible. The custom menu will revert on next power up.

## Related Content

- [Pass-Thru Data Logging](#)