




WINUSB Drivers for FlashScan/AutoCal V3 on Windows 7


EFILive Support - 2020-07-10 - Comments (0) - AutoCal V3 Hardware Configuration

For some computers running Windows 7 it may be necessary to install WINUSB drivers.


1. Start Windows Device Manager by pressing the Windows+Pause/Break hotkey combination. Alternatively, depending on whether the Control Panel is configured to display as Categories or Icons, you can navigate to the Device Manager using:
 - Categories: Start->Control Panel->Hardware and Sound -> Device Manager
 - Icons: Start -> Control Panel -> Device Manager
2. Connect your **FlashScan/AutoCal V3** device. It should appear under the “Other Devices” branch.

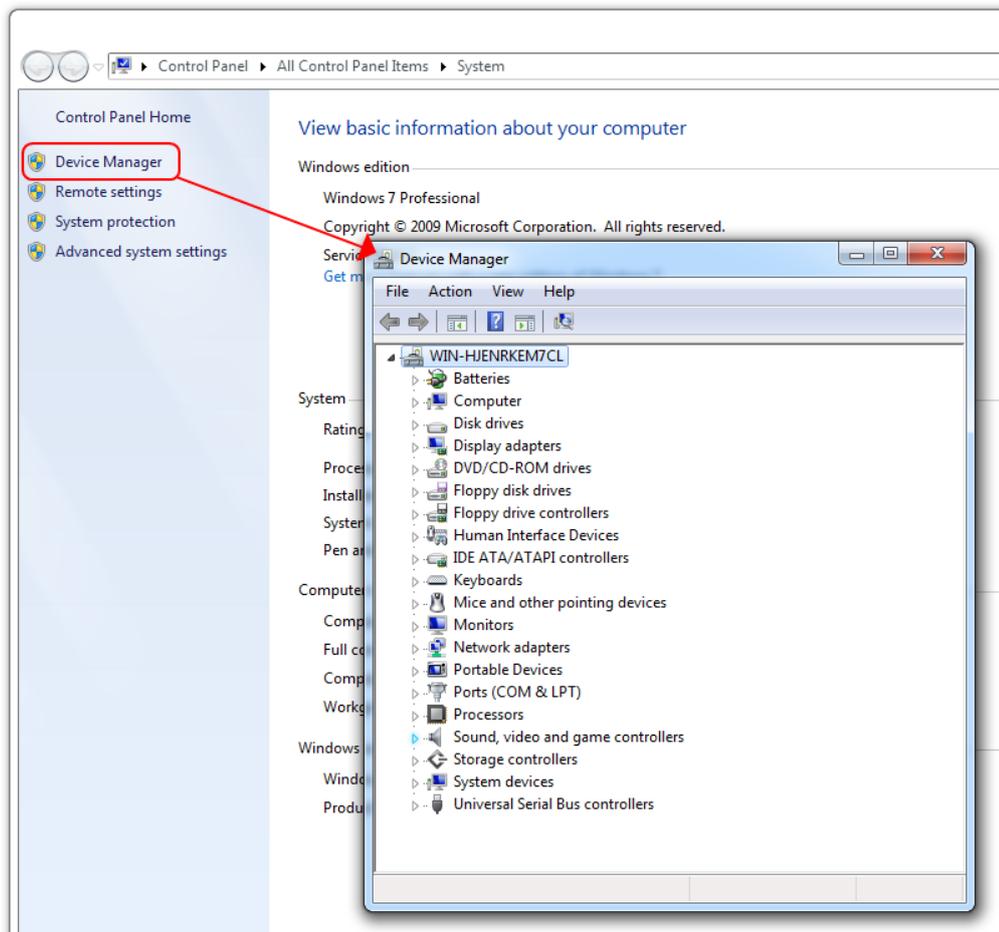


3. Right-Click on the “**EFILive FlashScan V3**” (or “**EFILive AutoCal V3**”) entry and select “Update Driver Software.”

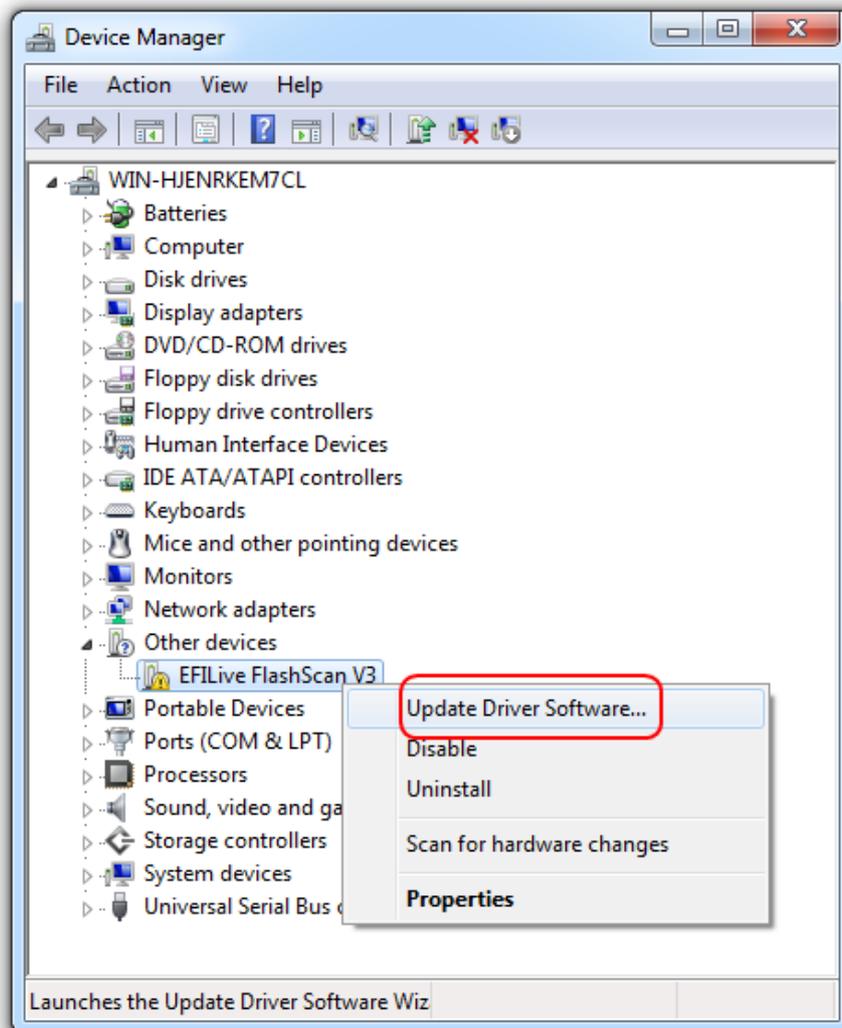


4. Select the "Browse my computer for driver software" option.

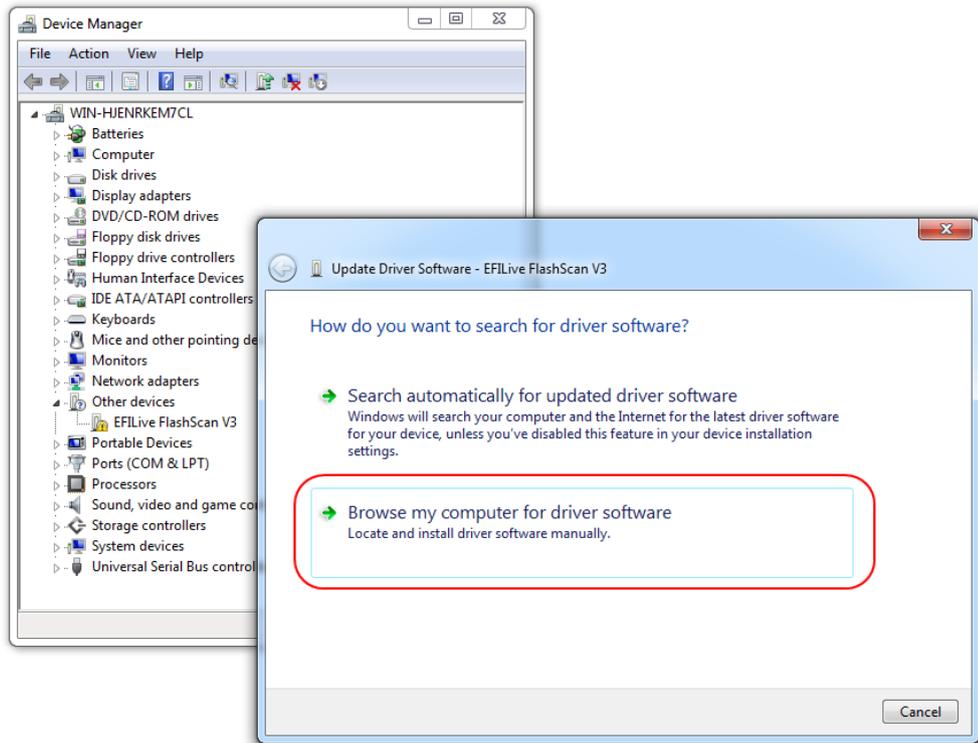


5. Browse to the Drivers folder of the installed the EFILive V8 software, usually **C:\Program Files (x86)\EFILive\Drivers\EFILive** and select the WINUSB-Win-7 folder and click **[OK]**.

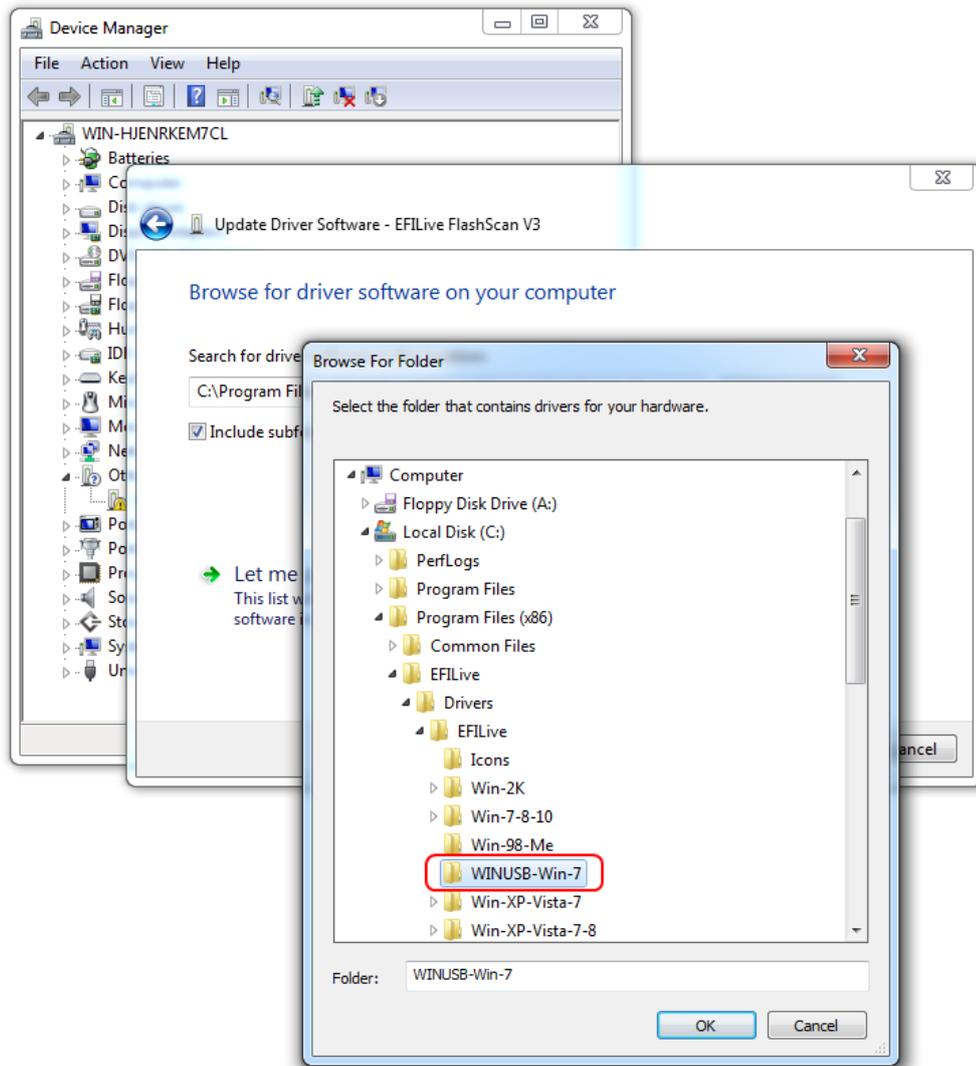


6. Click **[Next]**.

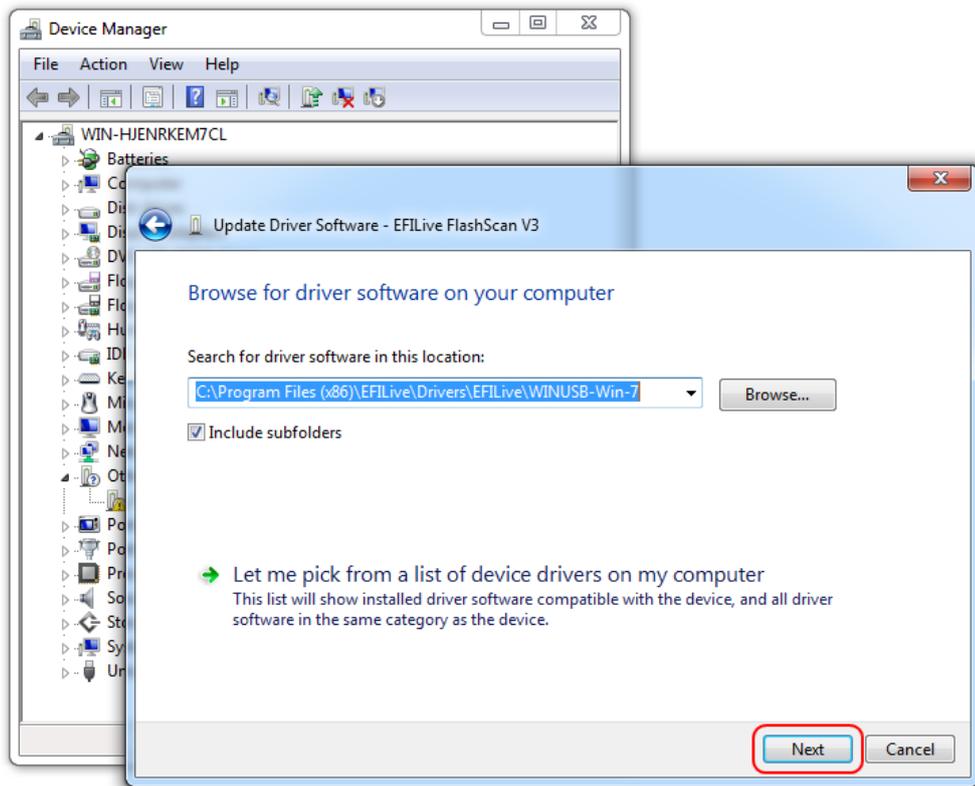

7. Click **[Close]**.

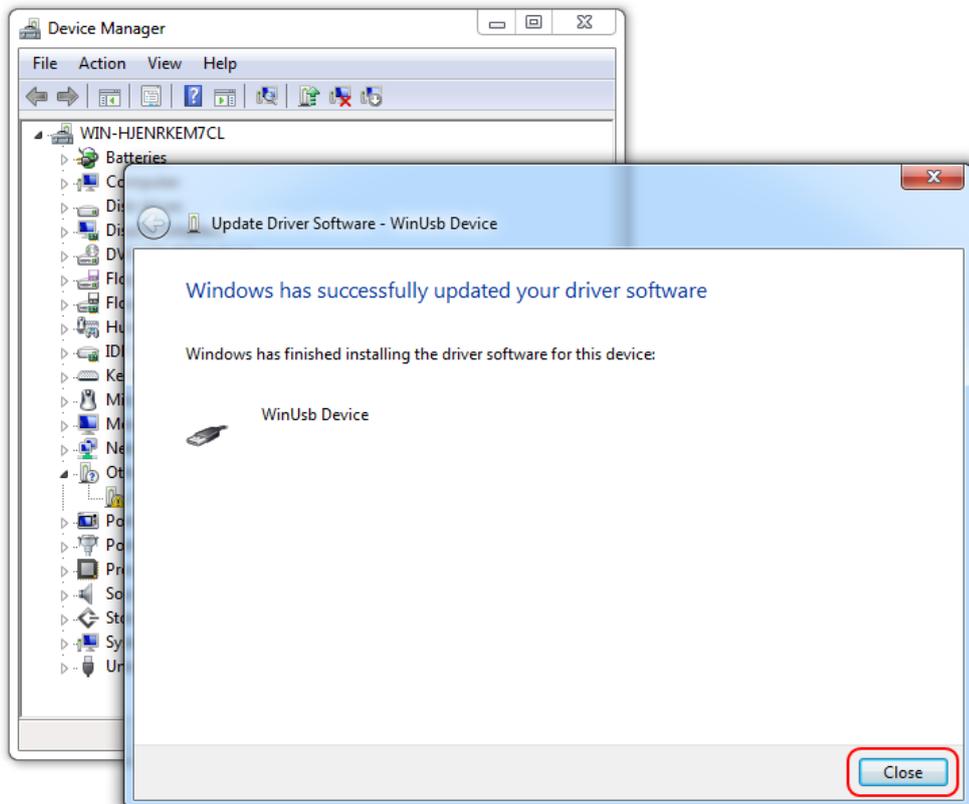

8. The FlashScan or AutoCal device should now be displayed under the Universal Serial Bus Devices branch and is now ready to use.

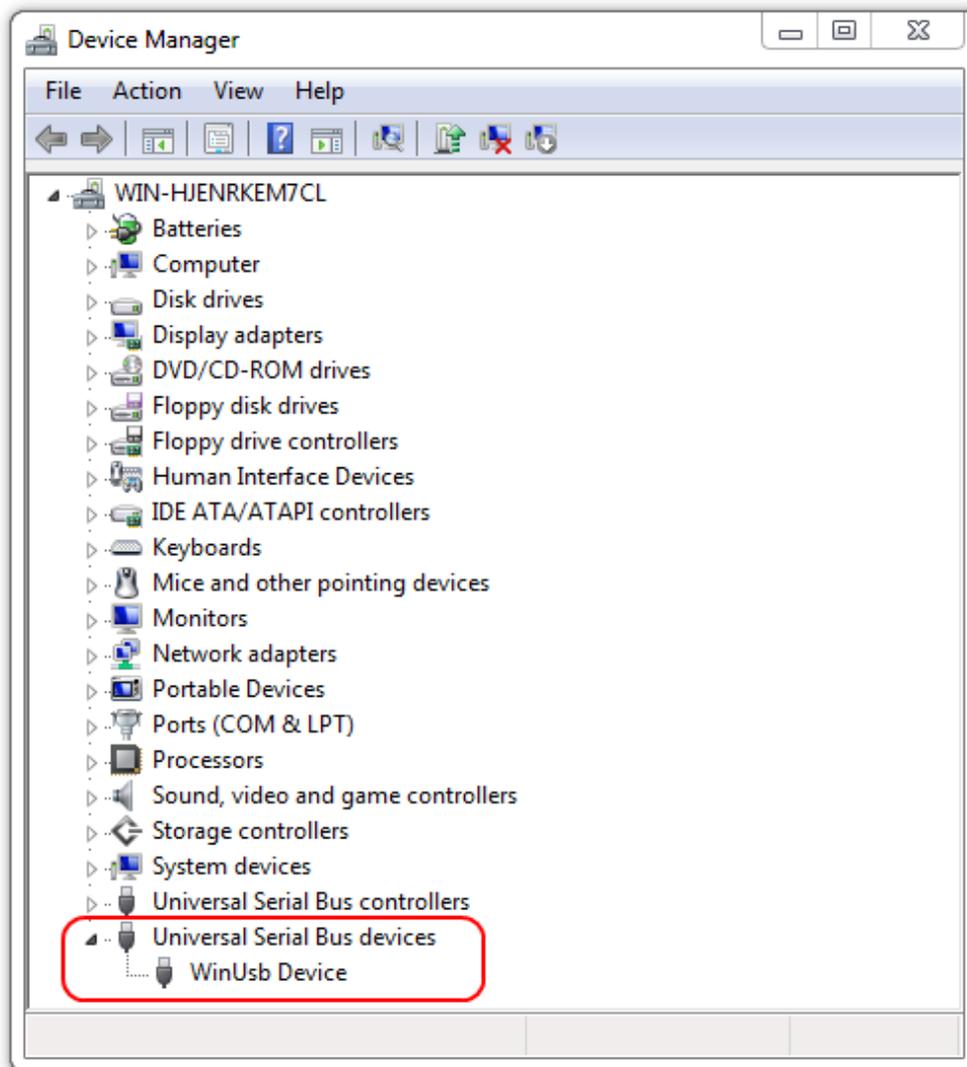

Related Content

- [V3 USB FAQ](#)